



Fairphone SIM Card Replacement

Remove or replace your Fairphone's SIM card.

Written By: Sam Lionheart



INTRODUCTION

Use this guide to replace either, or both, of the two SIM cards, and the microSD card.

Step 1 — Back Cover



i There is a small indentation in the side of the phone near the bottom of the back cover.

- With the indentation as leverage, use your fingernail to pry the bottom portion of the back cover from the phone.

Step 2



- Slide the back cover down and remove it from the phone.

Step 3 — Battery



- i** There is a small indentation in the back of the phone just below the battery.
- Use a fingernail in this indentation to push the battery toward the top of the phone
 - Pull the battery out away from the phone.

Step 4



- Remove the battery from your Fairphone.

Step 5 — SIM and MicroSD Card



- Use your finger to slide the SIM card straight down out of its tray.
 - Remove the SIM card from your Fairphone.
 - ⓘ Repeat this procedure if you have a second SIM card.
- ⚠ Be sure to remove all SIM cards before servicing your phone.

Step 6



- If you have a microSD card, use your finger to slide it straight out of its slot.
- Remove the microSD card from your phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 08:11:12 PM.